


NOTE 1: SOME OF THE CIRCUITS SHOWN HERE WILL NOT BE ACTIVE IN ALL APPLICATIONS. CONSULT THE EQUIPMENT MANUFACTURER'S LITERATURE TO DETERMINE WHICH CIRCUITS ARE USED.

NOTE 2: MAY BE EITHER INCREMENT OR DECREMENT DEPENDING ON THE VALUE OF THE ECM ADJUSTABLE PARAMETER CRUISE CONTROL SETUP.

NOTE 3: THIS FUSE AMPERAGE IS OEM SPECIFIC.








OEM RESPONSIBILITY

ENGINE CONTROL MODULE OEM CONNECTOR J2

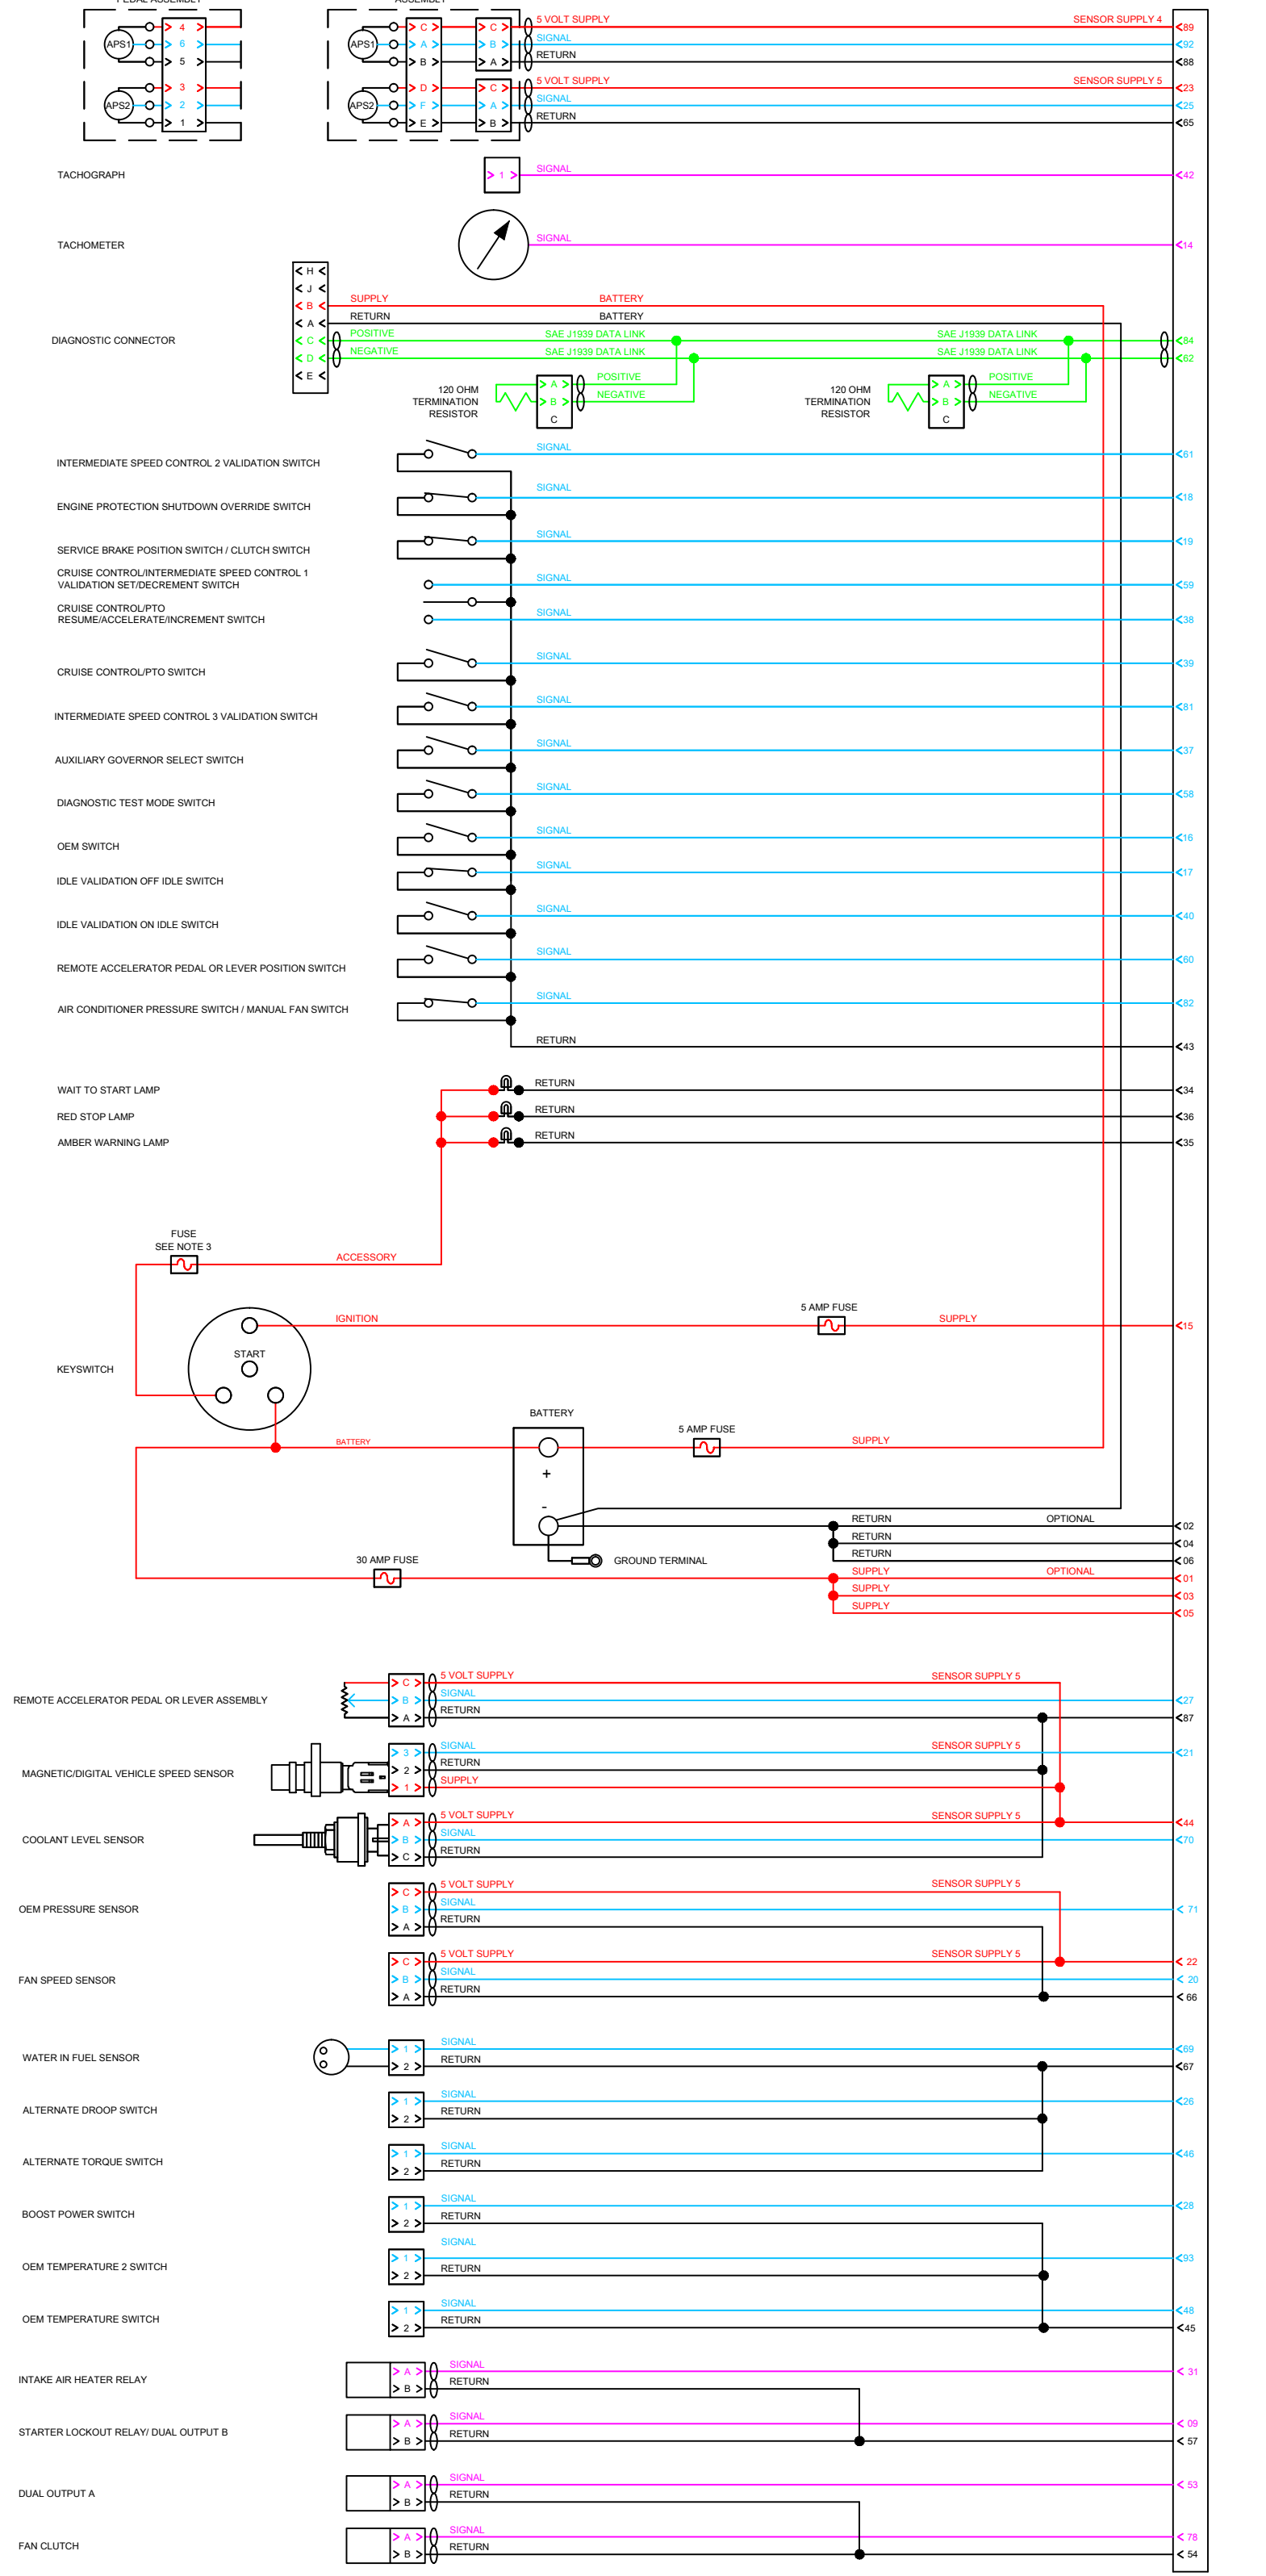

CUMMINS RESPONSIBILITY

ENGINE CONTROL MODULE ENGINE HARNESS CONNECTOR J1

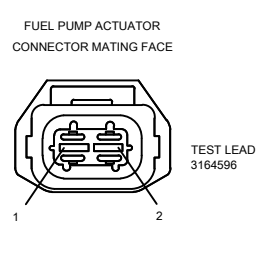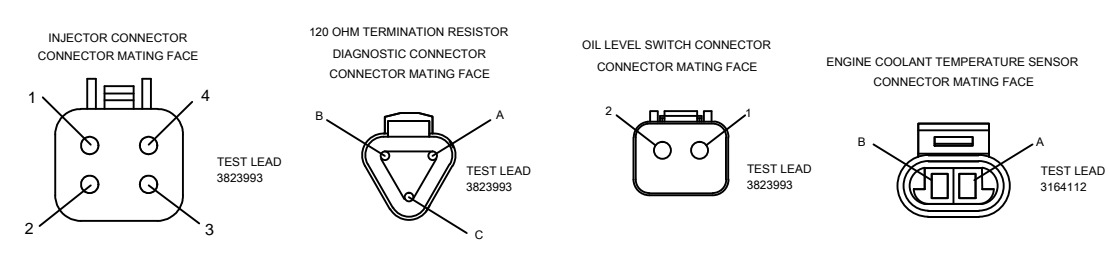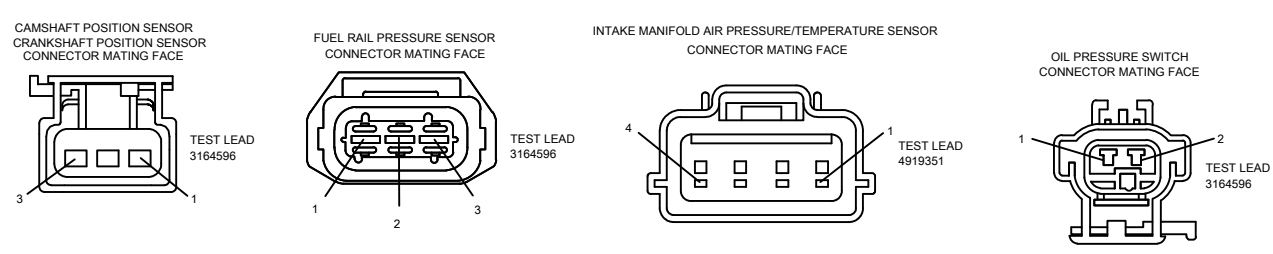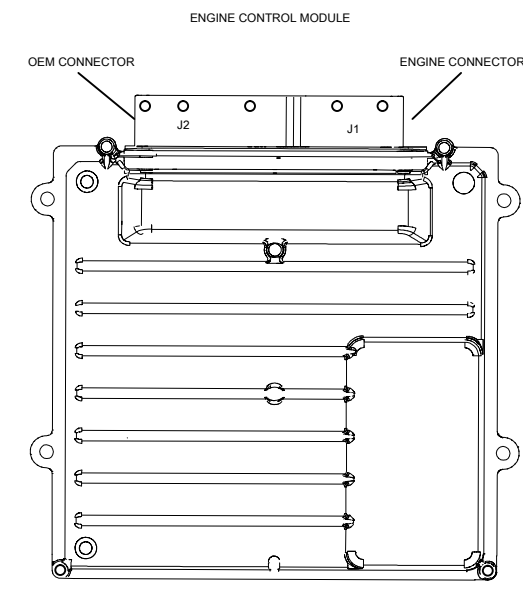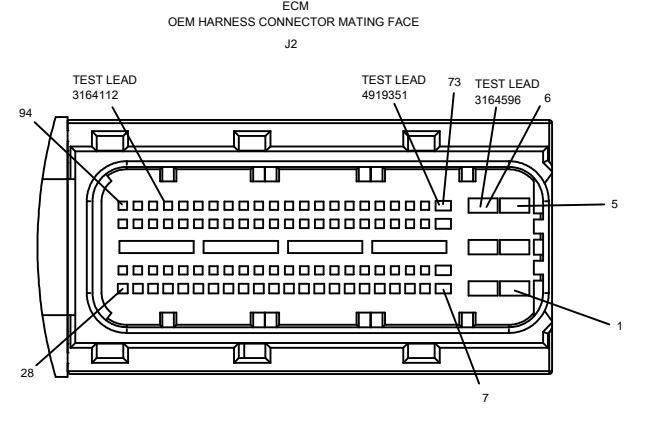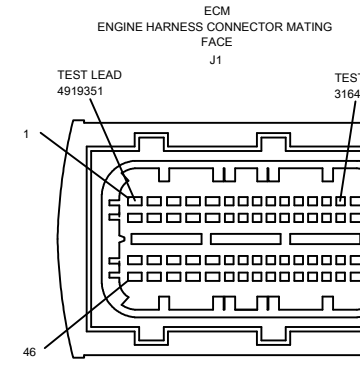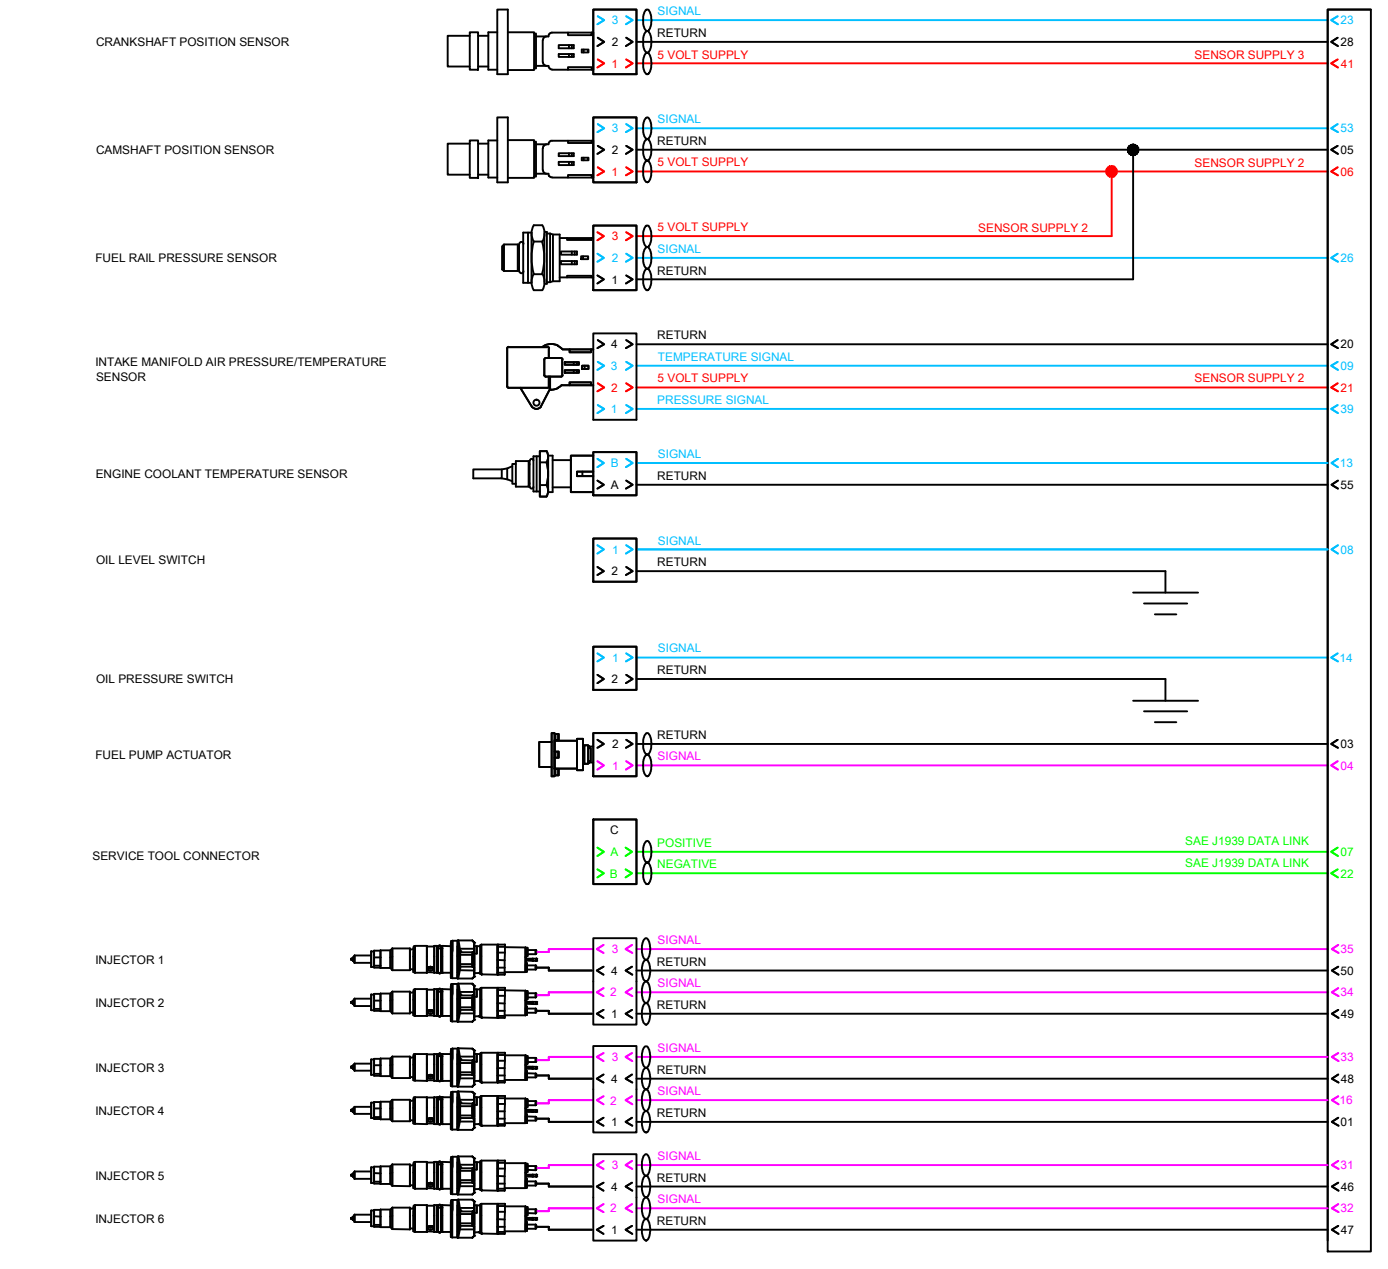

Cummins

QSB6.7 CM2880 Tier 2 / Tier 3  
Wiring Diagram

Bulletin 4358441  
Printed in U.S.A. 00-MONTH-2014